

ALLURE CHAIR

INSTRUCTIONS FOR ADJUSTMENT



- ① **SEAT HEIGHT:** Pull up on the paddle lever and allow the gas-spring to lift the seat. Release the lever when the desired height is reached.
- ② **BACK TILT LOCK:** Push the back-rest backwards and then pull the left-handed paddle lever up to lock it in the desired position. Push the paddle lever down and nudge the backrest backwards to release.
- ③ **SEAT TILT SPRING TENSION:** Rotate the winder clockwise or anti-clockwise to increase or decrease tilt resistance.