

## **EBEN CHAIR**

## INSTRUCTIONS FOR ADJUSTMENT

www.workspace.com.au Sydney | Melbourne | Adelaide | Canberra | Brisbane



- SEAT HEIGHT: Pull the handle out and allow the gas-spring to lift the seat. Release the handle when the desired height is reached.
- ② BACK TILT LOCK: With the handle in the pushed-in position, push the backrest to the desired tilt position and then pull the handle out to lock. To release simply push the handle in.
- SEAT DEPTH: Pull the handle out and slide the seat forward or backward. Release the handle when the seat is at the desired position.
- ARMREST HEIGHT ADJUSTMENT: Press the button on the outer side of either arm-rest to unlock. Then slide arm-rest up or down to the desired height and release button.
- ARMREST POSITION ADJUSTMENT: The armrests can be individually slid forward or back and rotated from side-to-side to a desired position.