

- Up button –** hold the up button to move the desk to the desired height. Release to stop
- Down button-** hold the down button to move the desk to the desired height. Release to stop
- Display screen-** displays the height (640-1290)
- M1-** Memory 1: hold the M1 button for 5 seconds to save the height preference
- M2-** Memory 2: hold the M2 button for 5 seconds to save the height preference
- Home-** touch to move the desk to home position of 720mm
- Sleep mode-** All generations enter sleep mode after 30 seconds. To re-activate press the up or down buttons



PROGRAMING & ADJUSTMENT

1) Adjust CMS Sensitivity (for downwards movement)

- Hold the home button until a beep sounds (continue to hold until second beep sounds for model 180131) and the options menu appears
- Use the up/ down buttons to scroll through options A to F.
- Select A (when A shown on the display screen) by pressing the home button
- Use the up/down buttons to scroll through the sensitivity levels 1 through to 4
- Select 1 (when 1 is shown on the display screen) by pressing the M2 button.
- Press M2 to return to normal function.

NOTE: Always select sensitivity level 1. Never select level 4 (this turns off the CMS)

2) Adjust Unit of Measurement

- Hold the home button until a beep sounds (continue to hold until second beep sounds for model 180131) and the options menu appears
- Use the up/down buttons to scroll through options A to F.
- Select B (when B is shown on the display screen) by pressing the home button
- Use the up/down buttons to scroll through the units for measurement options. (1= CM, 2= Inch)
- Select 1 (when 1 is shown on the display screen) by pressing M2
- Press M2 to return to normal function.

3) Calibrate height

NOTE: complete this step before step 4.

- Move the desk to its lowest position (ensure all legs are fully retracted)
- Hold the home button until a beep sounds (continue to hold until second beep sounds for model 180131) and the options menu appears
- Use the up/down buttons to scroll through options A to F.
- Select c (when C is shown on the display screen) by pressing the home button
- Measure the physical height of the desk
- Use the up/down buttons to match the displayed height to the physical height (to the nearest CM)

- Press M2 to complete the setting
- Press M2 to return to normal function.

4) Set Lower Limit

NOTE: complete step 3 before step 4.

- Hold the home button until a beep sounds (continue to hold until second beep sounds for model 180131) and the options menu appears
- Use the up/down buttons to scroll through options A to F.
- Select D (when D is shown on the display screen) by pressing the home button
- Use the up/down buttons to set the desired lower limit.
- Press M2 to complete the setting
- Press M2 to return to normal operation.

5) Set Height Limit

- Hold the home button until a beep sounds (continue to hold until second beep sounds for model 180131) and the options menu appears
- Use the up/down buttons to scroll through options A to F.
- Select E (when E is shown on the display screen) by pressing the home button
- Use the up/down buttons to set the desired lower limit.
- Press M2 to complete the setting
- Press M2 to return to normal operation

6) Adjust CMS Sensitivity (for upwards movement)

- Hold the home button until a beep sounds (continue to hold until second beep sounds for model 180131) and the options menu appears
- Use the up/down buttons to scroll through options A to F.
- Select F (when F shown on the display screen) by pressing the home button
- Use the up/down buttons to scroll through the sensitivity levels 1 through to 4
- Select preferred option by pressing the M2 button.
- Press M2 to return to normal function.

NOTE: you may wish to change sensitivity levels depending on how much weight is on your desk top. Consider removing weight before selecting level 4 (Workspace recommend not to select level 4, CMS off mode, for desk protection and work life longevity)